

EKSPRESSHENGERE


Montering



1. Bor et 8 mm hull.
Dybde minst 30 mm.



2. Ekspresshengeren slås
deretter inn i hullet.

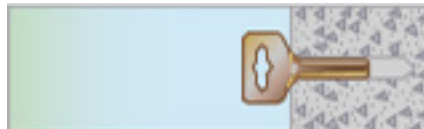

3. Monteringen er ferdig.